

Quality is more than a word

ESPEC

Platinous J Series

Temperature & Humidity Chamber · Low Temperature (& Humidity) Chamber
Ultra Low Temperature (& Humidity) Chamber · High Temperature & Humidity Chamber
Low Humidity Type (Low) Temperature & Humidity Chamber · Clean Temperature & Humidity Chamber



ESPEC Platinous J Series Brings New Value to the World of Test Equipment.

Its rich collection of advanced features has quickly made the Platinous J Series the environmental test chamber of choice over the world.

At the very top of the list of impressive Platinous J Series features is a dramatic reduction in power consumption, thanks to a new energy saving, highly reliable cooling system.

The new N-instrumentation allows J Series chambers to support easy-to-use networking system.

Backed up with more than 50 years of brand history, and a foundation based on solid experience, our technology is constantly being improved and polished in order to ensure our customers' test reliability, performance, and safety.

Type 1



Type 2



Contents

● Models Configuration	p.3 to 4
● Features	p.5 to 8
● Controller	p.9
● Network	p.10
● Typical Functions/ Options	p.11 to 14
● Specifications	p.15 to 23
● Installation Requirements	p.24
● Options	p.25 to 35
● Options Check Sheet	p.36 to 37
● OnlineCore & Test Navi	p.38

Scan QR codes on this brochure to watch videos.

Type 3



Type 4



Models Configuration

	Model	Temperature
Temperature & Humidity Chambers	Temperature & Humidity Chamber PR-1J / PR-2J / PR-3J / PR-4J	-20 to +100°C (-20 to +150°C (optional) -20 to +180°C (optional))
	Low Temperature & Humidity Chamber PL-1J / PL-2J / PL-3J / PL-4J	-40 to +100°C (-40 to +150°C (optional) -40 to +180°C (optional))
	Ultra Low Temperature & Humidity Chamber PSL-2J / PSL-4J	-70 to +100°C (-70 to +150°C (optional) -70 to +180°C (optional)*)
	High Temperature & Humidity Chamber PHP-2J / PHP-3J / PHP-4J	ambient temperature +10 to +100°C
	Low Humidity Type Temperature & Humidity Chamber PDR-3J / PDR-4J	-20 to +100°C
	Low Humidity Type Low Temperature & Humidity Chamber PDL-3J / PDL-4J	-40 to +100°C
	Clean Temperature & Humidity Chamber PCR-3J [Cleanliness: Class5 (HEPA Filter)]	-20 to +100°C
	Temperature Chambers	Low Temperature Chamber PU-1J / PU-2J / PU-3J / PU-4J
Ultra Low Temperature Chamber PG-2J / PG-4J		-70 to +100°C (-70 to +150°C (optional) -70 to +180°C (optional)*)

* Applicable only to Type 2


Humidity		Inside capacity
<p>20 to 98%rh</p> <ul style="list-style-type: none"> • With no specimen and under ambient temperature at +23°C. • Restrictions on continuous humidity operation at +40°C or lower because of frost on the cooler. 		<p>Type 1: 120 L Type 2: 225 L Type 3: 408 L Type 4: 800 L</p>
<p>40 to 98%rh</p> <ul style="list-style-type: none"> • With no specimen. 		<p>Type 2: 219 L Type 3: 398 L Type 4: 784 L</p>
<p>5 to 98%rh*</p> <ul style="list-style-type: none"> • With no specimen and under ambient temperature at +23°C. • Restrictions on continuous humidity operation at +40°C or lower because of frost on the cooler. 		<p>Type 3: 408 L Type 4: 800 L</p>
<p>30 to 90%rh</p> <ul style="list-style-type: none"> • With no specimen and under ambient temperature at +23°C. • Restrictions on continuous humidity operation at +40°C or lower because of frost on the cooler. 		<p>Type 3: 312 L</p>
		<p>Type 1: 120 L Type 3: 408 L Type 2: 225 L Type 4: 800 L</p>
		<p>Type 2: 306 L Type 4: 800 L</p>

*) Low Humidity Region Operation Precautions
• Operation in the low humidity region is not possible from a high temperature above +60°C. Perform transition from temperatures below +60°C.
• Gradient programs cannot be used in the low humidity region. • Programs that require humidifier switching cannot be used. • Programs that transit from outside the low humidity region to the low humidity region cannot be used. However, the transition from the low humidity region to another region is allowed.


Features

Energy-saving Technologies


● New Refrigeration Circuit

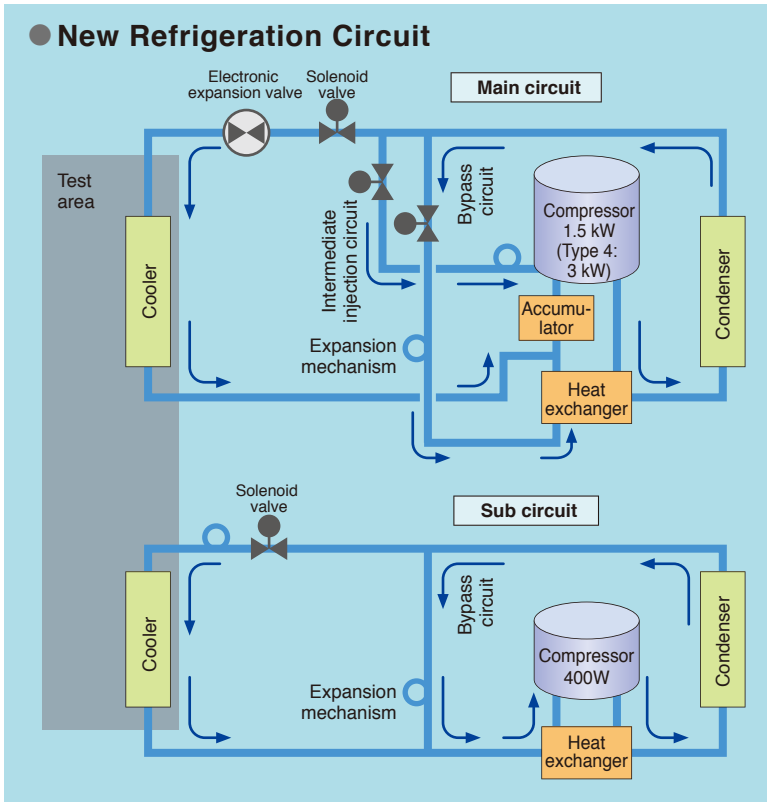

● Power Consumption Comparison (example)

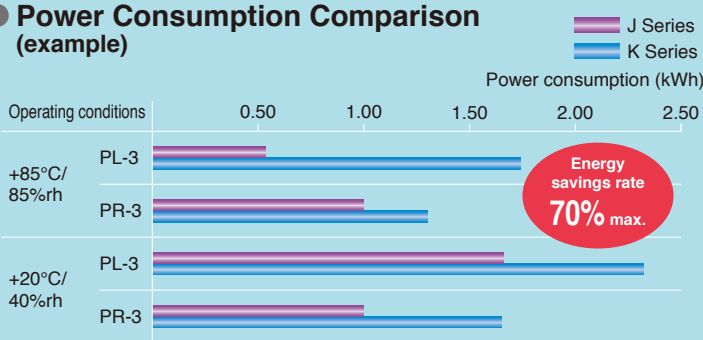

● Energy-saving DC Inverter Refrigeration

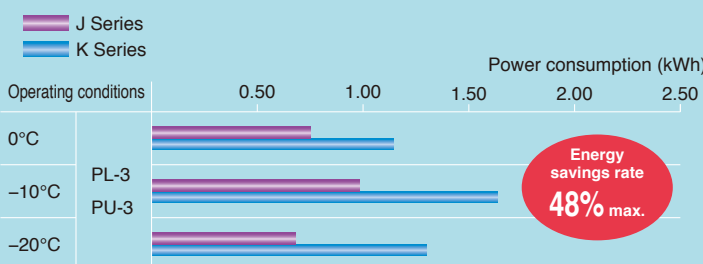

● Smart R&D System (Japanese patent no. 5514787)

Smart R&D System (Smart Refrigerator & Dehumidifier System) is the ESPEC patent, which can control both cooling and heating capacity at minimum limits. It provides highly accurate temperature / humidity environment with low energy consumption. The system consists of PID controlled refrigerator, and N instrumentation, which delivers high speed processing.

● A Sub Refrigeration Circuit PL-2/3/4, PU-2/3/4, PSL, PG, PDL, PCR

The chambers equip another energy-saving technology, a sub refrigeration circuit controlled by "Smart R&D System" with a 400W compressor. When the chamber operation is stable at constant ranges above 50°C / 40%rh, it switches to sub refrigeration to run at minimum energy. For example, the PL-3J power consumption can be cut by 70% max. (compared to previous K series)

● DC Inverter Refrigeration (Option, 200V only) PL-2/3/4, PU-2/3/4

If the chamber is often used in low temperature ranges, the DC inverter refrigeration is a better option for excellent energy saving performance in low temperature ranges.

● The Japan Machinery Federation The Energy-Efficient Machinery Award



優秀省エネルギー機器

Features

More User-friendly and Safely

● A Choice of Several Water Supply Systems

Several options to supply water to the chamber are offered, including direct tap water connection, pure water, additional tanks, etc.




Water tank



Additional water supply tank (option)

● Facile Wick Replacement PR, PL, PSL, PHP (Japanese patent no. 5571634)

The difficulty in replacing the wet-bulb wick has been improved by changing the shape of the wick's plug part to allow smooth replacement work.

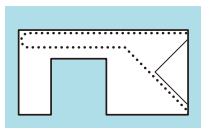

FW-5



Wick inside chamber



Condenser filter

● Easy Filter Cleaning

The condenser filter can be easily attached and removed from the chamber to make cleaning even easier.



● Door & Power Supply Locks

Door lock prevents accidental interruption during testing.

The double-lock door handle is designed to close the door more easily and safely. As an option, a power key switch can also be equipped to control the chamber's power.



Door handle lock



Power key switch (option)

Features




Door with viewing window



Wide-view door



Door without viewing window

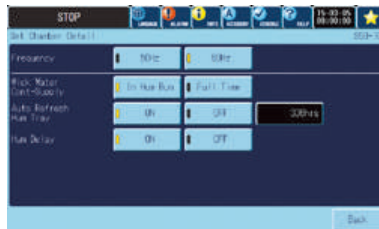

Detailed Chamber Setting



Ion Migration Evaluation System connection (example)

● A Variety of Door Types

Several types of chamber doors are available for selection: a standard type with viewing window, a door without a viewing window, and a wide-view door that allows you to check the inside of the whole test area.

Furthermore, you can customize the door according to your application by, for example, adding hand-in ports to the door or installing an inner glass door to the chamber door. (Page 11-12, 25-26)

● Humidifier Delay Function

Humidifier operation starts after the temperature is attained in order to reduce dew condensation on specimens.

● Automatic Humidifier Water Replacement

Humidifier stagnant water contains impurities and is a cause of trouble, so the chamber now features a function that automatically replaces the water at the period set from the controller screen.

● Combination with ESPEC Evaluation Systems

Even more accurate ion migration evaluations can be performed by connecting a Platinous J Series to our AMI System (sold separately).

If the chamber equips with an optional cable port on the right side, the cables can be accessed from both right and left sides of AMI system.

Features

PHP/PCR/PDR·PDL

● Heat Pipe (PHP)

Heat pipes are used for the cooling system, which means that the refrigeration system does not use electrical power. Furthermore, it enables high temp./humid. testing such as 95°C / 95%rh as heat pipes barely dehumidify in cooling.

● Up to 600W Heat Load Permissible at 85°C / 85%rh (PHP)

PHP is capable of treating a 600W (PHP-4J) heat generated from a specimen while operating at 85°C / 85%rh.


● ISO Class 5 Cleanliness (PCR)

PCR employs a HEPA filter to realize ISO Class 5 cleanliness in stable temp. & humid. control.

● Superior Low-humidity Control Performance (PDR·PDL)

With the independently-developed rotary regenerative dehumidifier method, low-humidity control is realized such as 60°C / 5%rh. (Control range chart is on page 4 & 19.)

As an option, further low temp. & humid. range (up to 5°C / 5%rh) can be controlled (page 31.)

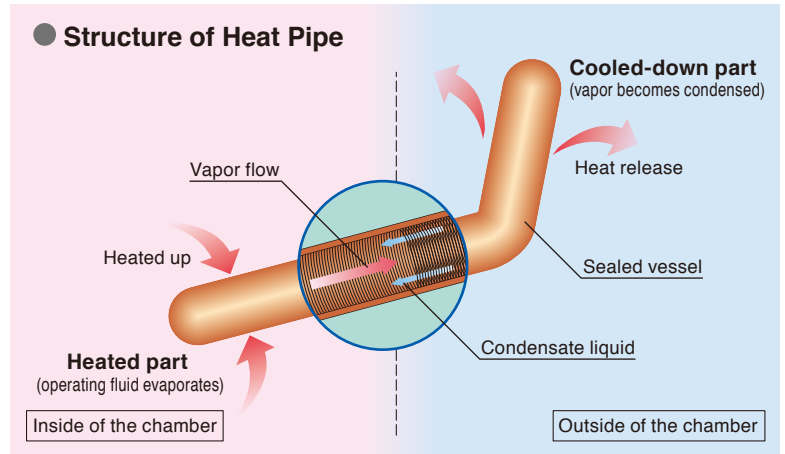


Clean Temperature & Humidity Chamber (PCR)



Low Humidity & Low Temperature Chamber (PDL)

Controller

ESPEC N-instrumentation for High-speed Processing

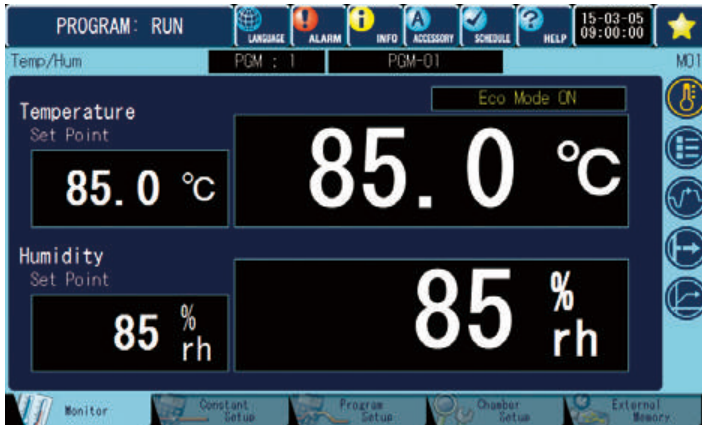

Instrumentation	N-instrumentation (P-310)
Test Patterns	Program operation: 40 patterns (99 steps/ program) Constant operation: 3 patterns
Languages	English, Chinese (simplified/ traditional), Korean, & Japanese

*German, Russian and Spanish are also available. Please inquire for the details.

● Tabbed Interface

High resolution 7 inch LCD. Tabs are displayed at the bottom of the screen to help access to other screens. A touch navigation bar is also displayed along the right of the screen to access principal pages anytime.

● Information Function

The INFO icon will blink when chamber information requiring attention.

- Inspection Period Notifications
It is possible to randomly preset the period and details of inspections for humidifier plates and condenser filters.
- Status Notifications
Defrosting, auto-humidifying water replacement, and so on.

Handy Functions Using USB Port



USB port

* USB flash drives is not supplied.

● Test Data Records & Exports


Temp. & humid. settings and measured values are recorded on controller's internal memory. The data and its graph can be exported to USB flash drives.

* Interval can be changed.

● Program Patterns Copying

Program patterns can be copied between chambers with the use of USB flash drives without using a computer.

● Program Copying and Computer Editing

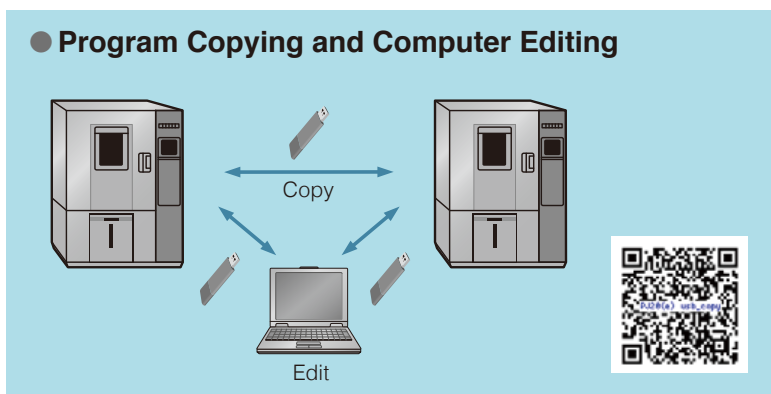

● PATTERN MANAGER Lite

It is a PC software that makes the most of the USB port.

Outside of any networks, the test data exported via USB flash drive can be checked and graphed on PC. You can also change the chamber's set values and import the edited data to chambers.

The program patterns in accordance with test standards are available on our web site, "Test Navi" (page 38.)

Network

Able to Monitor & Operate from Web Browser

Remote Monitoring and Control (Ethernet Connection)

The chambers are equipped with unique web applications that enable chamber status to be confirmed and operated from a web browser screen (PC or tablet terminal). It is also possible to start operations with a PC or other device from a remote location.

Editing Test Profiles with a Browser

It is possible to edit the program patterns registered in the testing chamber with a web browser.


Displaying Data in Graphs

Settings and measurement values saved in the testing chamber can be displayed as graphs on a web browser.

E-mail Notifications

Details on alarms that have been triggered will be sent to pre-registered e-mail addresses. It is also possible to transmit e-mails when testing has finished.

* An Intranet environment is required to transmit e-mails.

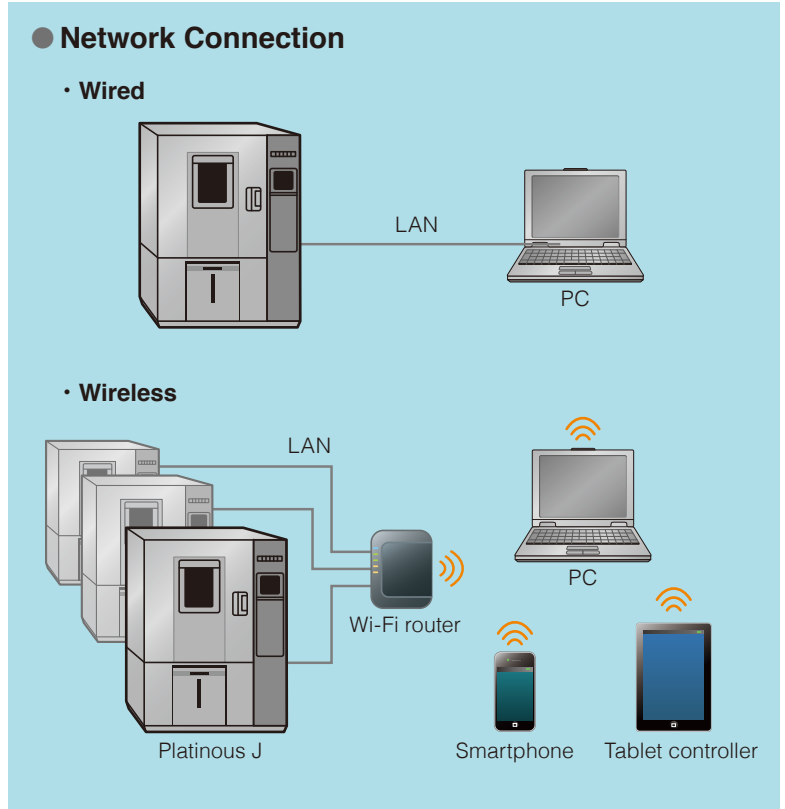


Login Privileges of Web Browser

Privileges / Screen	Chamber monitor	Constant/ Program setup	Run/Stop	Configuration
Administrator	✓	✓	✓	✓
Operator	✓	✓	✓	
User	✓			

ESPEC OnlineCore

OnlineCORE (Sold separately, page 38)

Central control system recommended for multiple environmental test chambers installations

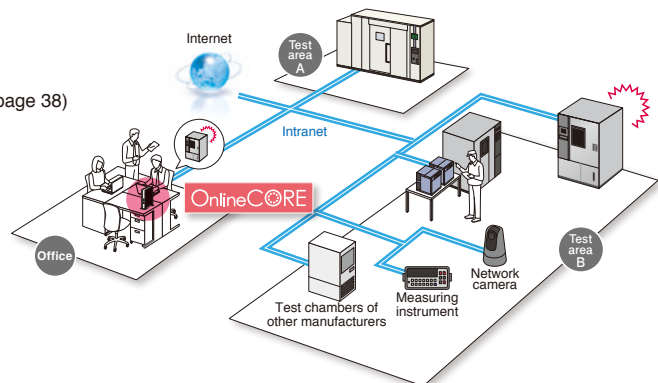

Typical Functions/ Options

For Better Operability



In addition to standard specifications, a wide selection of options is available to enhance functions and meet specific testing needs. Test equipment performance can also be enhanced to make it more accurate, multi-functional, or capable of a greater load as designed.

1 Ceiling cable port

2 Specimen basket

The basket can be placed on a shelf to hold small specimens.



3 Left-side cable port (standard)

4 Shelf

Shelve(s) can be placed in the sides of the test area to hold specimens.



5 Wide-view door


An all-glass wide-view door provides an unrestricted view of every bit of space inside the chamber.

Temperature differential with the outside of the chamber can be controlled to suppress the formation of condensation on the glass surface.

Typical Functions/ Options

⑥ EZ connect cable port plug for power supply

This mounting/dismounting terminal can be additionally installed on the left side cable port. It simplifies to connect the wiring for voltage or measurement equipment to the specimens located inside the chamber.

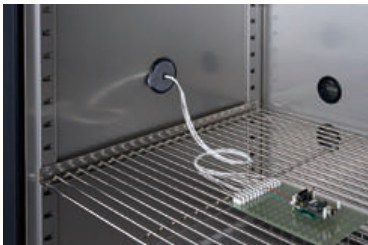

⑦ Paperless recorder

Records internal temperature and other temperature (and humidity).

⑧ Applying DC power supply

Used to apply voltage to specimens for bias testing. The output mode and interlock conditions can be set for the DC power supply in each step of the temperature and humidity program.

⑨ Right-side cable port

A cable port in the right side of the chamber.

* The standard cable port is located in the left side.



⑪ Power meter

Shows the chamber integral power consumption.

⑫ Folding table

A folding table is provided on the right side of the chamber. It can be used to hold measuring instrument, a computer, or other devices connected to the chamber.



⑬ 100 V power sockets

Two 100 V power sockets can be used to supply power for specimen and/or measuring instruments. One circuit protector is also equipped.

⑩ Specimen temperature control

A temperature sensor, which will be connected directly to specimen. It enhances the accuracy of temperature tests.

Wide-view door with hand-in ports

The glass can be equipped with hand-in ports for models type 3 and 4. This option is the optimum choice when observation of or operations on a specimen are required during testing. (Japanese patent number 4137894)



Watch a video about how to use wide-view door hand-in port. ▼



Electrochromic viewing window

Use the chamber lamp to switch the window opacity to the transparent state. The test area can be observed while the lamp is on.



Lamp on



Lamp off



Typical Functions/ Options

Safety of Operators and Protection of Specimens



Safety functions depend on the specimen characteristics. A wide variety of options is available to protect the chamber in the case of specimens that generate corrosive substances, to protect the specimens and the chamber during testing, and to ensure the safety of the operator(s).

1 Status indicator light

Indicator tower provides a view of the chamber status from a remote location. Light color, light status (on, blinking), buzzer on/off can be configured as required.



2 Door handle (standard)

Large handle provides a better grip. A double lock provides secure opening and closing.



3 Door lock (standard)

Prevents door opening during testing.

4 Power indicator

Indicates the breaker on/off status from the front of the chamber.



Typical Functions/ Options

5 Specimen power supply control terminal (standard)

If the chamber sends an error alert, the equipment's power supply connected through this terminal is shut down immediately.



6 Overheat protector (standard) Additional overheat protector

Specimen protection is enhanced by an additional overheat protector.



7 Overcool protector

Operation will stop to protect specimens whenever temperature in the test area drops below a setting temperature for some reason.

8 Emergency stop pushbutton

Switch for manual emergency stop of the chamber. Also available with a guard or cover to prevent unintended operation.



9 Alarm output terminal

This contact signal terminal is for sending error alerts to a remote location during safety actions.

10 Power key switch

Installation of the power supply key enables management of the chamber use.



11 Dehumidifier electrical compartment door switch (standard)

A breaker turns off to protect against electric shock if a door open state is detected.



Adapted to customer safety standards

Options are available to adapt a chamber to administration conditions of the customer using it. An emergency stop pushbutton unintended operation prevention guard, a status indicator light can be configured with a four color-coded levels, operation conditions, a buzzer, and more.



Model	PR-1J	PR-2J	PR-3J	PR-4J	
System	Balanced Temperature and Humidity Control system (BTHC system)				
Performance*1	Temp. & humidity range	-20 to +100°C/20 to 98%rh *2 Refer to diagram of temperature & humidity controllable range on this page.			
	Temp. & humidity fluctuation	±0.3°C/±2.5%rh			
	Temperature variation in space	1.5°C			
	Temperature rate of change	Heat up rate: 3.0°C/min. Pull down rate: 2.0°C/min.		Heat up rate: 3.0°C/min. Pull down rate: 1.0°C/min.	
	Temperature extremes achievement time	Heat up time: from +20 to +100°C 30 min. Pull down time: from +20 to -20°C 40 min.			
	Allowable heat load*3	800 W	1100 W	1250 W	
Allowable ambient conditions	0 to +40°C/up to 75%rh				
Construction	Exterior material	Stainless steel plate: 18 Cr stainless steel plate, hairline finish			
	Test area material	Stainless steel plate: 18-8 Cr-Ni stainless steel plate, 2B polish			
	Heater	Nichrome strip wire heater			
	Humidifier	18-12-2.5 Cr-Ni-Mo stainless steel sheathed heater (surface evaporating system)			
	Cooler (dehumidifier)	Plate fin cooler			
	Air circulator	Cross flow fan		Sirocco fan	
	Water supply	Supply system	Pump out system		
		Water tank	16 L	32 L	
	Refrigeration unit	System	Mechanical type single-stage compression cooling		
		Compressor	Rotary compressor (R404A)		
Refrigerator capacity		0.65 kW	1.2 kW		
Expansion mechanism		Electronic expansion valve			
Capacity	120 L	225 L	408 L	800 L	
Chamber total load resistance	100 kg				
Dimensions*4	Inside dimensions (W x H x D mm)	500 x 600 x 400	500 x 750 x 600	600 x 850 x 800	1000 x 1000 x 800
	Outside dimensions (W x H x D mm)	910 x 1440 x 873	910 x 1590 x 1073	1010 x 1690 x 1273	1410 x 1840 (1970) x 1273
Weight	260 kg	305 kg	365 kg	480 kg	


*1 The performance values are based on IEC60068-3-5:2001 and IEC60068-3-6:2001;

Performance figures are given for a +23°C ambient temperature, relative humidity of 65±20%rh, rated voltage, and no specimen inside the test area.

*2 Lowest attainable temperature in an ambient temperature of 0 to +30°C

*3 When temperature in chamber is +20°C

*4 Excluding protrusions. Dimension indicated in () includes protrusion.

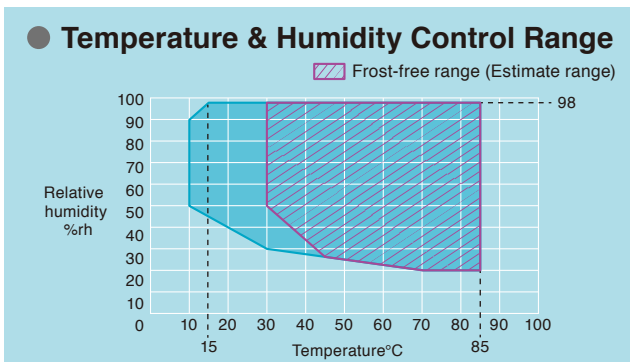

* With no specimen and under ambient temperature at +23°C.

* Restrictions on continuous humidity operation at +40°C or lower because of frost on the cooler.

PL

-40 to +100°C (+150°C / +180°C) • 20 to 98%rh LOW TEMPERATURE & HUMIDITY CHAMBER

Model	PL-1J	PL-2J	PL-3J	PL-4J	
System	Balanced Temperature and Humidity Control system (BTHC system)				
Performance ^{*1}	Temp. & humidity range ^{*2}	-40 to +100°C/20 to 98%rh Refer to diagram of temperature & humidity controllable range on this page.			
	Temp. & humidity fluctuation	±0.3°C/±2.5%rh			
	Temperature variation in space	1.5°C			
	Temperature rate of change	Heat up rate: 3.0°C/min. Pull down rate: 2.0°C/min.			
	Temperature extremes achievement time	Heat up time: from +20 to +100°C 30 min. Pull down time: from +20 to -40°C 45 min.			
	Allowable heat load ^{*3}	850 W	1400 W	1500 W	2850 W
Allowable ambient conditions	0 to +40°C/up to 75%rh				
Construction	Exterior material	Stainless steel plate: 18 Cr stainless steel plate, hairline finish			
	Test area material	Stainless steel plate: 18-8 Cr-Ni stainless steel plate, 2B polish			
	Heater	Nichrome strip wire heater			
	Humidifier	18-12-2.5 Cr-Ni-Mo stainless steel sheathed heater (surface evaporating system)			
	Cooler (dehumidifier)	Plate fin cooler	Plate fin cooler, stainless steel tube cooler		
	Air circulator	Cross flow fan		Sirocco fan	
	Water supply	Supply system	Pump out system		
		Water tank	16 L		32 L
	Refrigeration unit	System	Mechanical type single-stage compression cooling		
		Compressor	Rotary compressor (R404A)	Rotary compressor (R404A) Reciprocating compressor (R404A)	Scroll compressor (R404A) Reciprocating compressor (R404A)
Refrigerator capacity		1.2 kW	1.5 kW + 0.4 kW		
Expansion mechanism		Electronic expansion valve	Electronic expansion valve, capillary tube		
Capacity	120 L	225 L	408 L	800 L	
Chamber total load resistance	100 kg				
Dimensions ^{*4}	Inside dimensions (W x H x D mm)	500 x 600 x 400	500 x 750 x 600	600 x 850 x 800	1000 x 1000 x 800
	Outside dimensions (W x H x D mm)	910 x 1440 x 873	910 x 1590 x 1073	1010 x 1690 x 1273	1410 x 1840 (1970) x 1273
Weight	270 kg	340 kg	420 kg	610 kg	


*1 The performance values are based on IEC60068-3-5:2001 and IEC60068-3-6:2001;

Performance figures are given for a +23°C ambient temperature, relative humidity of 65±20%rh, rated voltage, and no specimen inside the test area.

*2 Lowest attainable temperature in an ambient temperature of 0 to +30°C

*3 When temperature in chamber is +20°C

*4 Excluding protrusions. Dimension indicated in () includes protrusion.

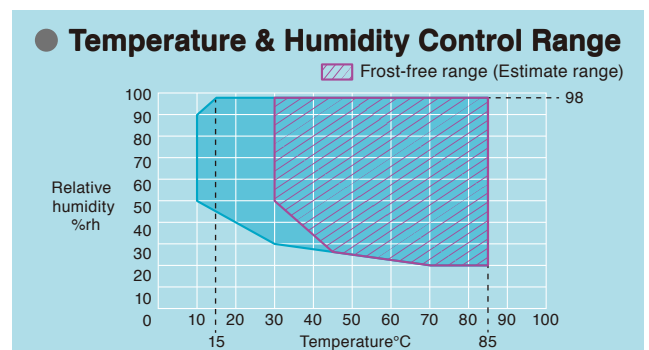

* With no specimen and under ambient temperature at +23°C.

* Restrictions on continuous humidity operation at +40°C or lower because of frost on the cooler.

Model		PSL-2J	PSL-4J	
System		Balanced Temperature and Humidity Control system (BTHC system)		
Performance ^{*1}	Temp. & humidity range ^{*2}	-70 to +100°C/20 to 98%rh Refer to diagram of temperature & humidity controllable range on this page.		
	Temp. & humidity fluctuation	±0.3°C/±2.5%rh		
	Temperature variation in space	1.5°C		
	Temperature rate of change	Heat up rate: 5.0°C/min. Pull down rate: 2.0°C/min.	Heat up rate: 5.0°C/min. Pull down rate: 1.0°C/min.	
	Temperature extremes achievement time	Heat up time: from +20 to +100°C 30 min. Pull down time: from +20 to -70°C 65 min.		
	Allowable heat load ^{*3}	700 W	2200 W	
Allowable ambient conditions		0 to +40°C/up to 75%rh		
Construction	Exterior material	Stainless steel plate: 18 Cr stainless steel plate, hairline finish		
	Test area material	Stainless steel plate: 18-8 Cr-Ni stainless steel plate, 2B polish		
	Heater	Nichrome strip wire heater		
	Humidifier	18-12-2.5 Cr-Ni-Mo stainless steel sheathed heater (surface evaporating system)		
	Cooler (dehumidifier)	Plate fin cooler (Doubles as dehumidifier), stainless steel tube cooler		
	Air circulator	Cross flow fan	Sirocco fan	
	Water supply	Supply system	Pump out system	
		Water tank	16 L	32 L
	Refrigeration unit	System	Mechanical cascade refrigerator system	
		Compressor	Rotary compressor (R404A, R508A) Reciprocating compressor (R404A)	Scroll compressor (R404A, R508A) Reciprocating compressor (R404A)
Refrigerator capacity		1.5 kW x 1.5 kW + 0.4 kW	3.0 kW x 3.0 kW + 0.4 kW	
Expansion mechanism		Electronic expansion valve, capillary tube		
Capacity		306 L	800 L	
Chamber total load resistance		100 kg		
Dimensions ^{*4}	Inside dimensions (W x H x D mm)	600 x 850 x 600	1000 x 1000 x 800	
	Outside dimensions (W x H x D mm)	1010 x 1690 x 1273	1410 x 1853 (1983) x 1593	
Weight		470 kg	705 kg	


*1 The performance values are based on IEC60068-3-5:2001 and IEC60068-3-6:2001;

Performance figures are given for a +23°C ambient temperature, relative humidity of 65±20%rh, rated voltage, and no specimen inside the test area.

*2 Lowest attainable temperature in an ambient temperature of 0 to +30°C

*3 When temperature in chamber is +20°C

*4 Excluding protrusions. Dimension indicated in () includes protrusion.

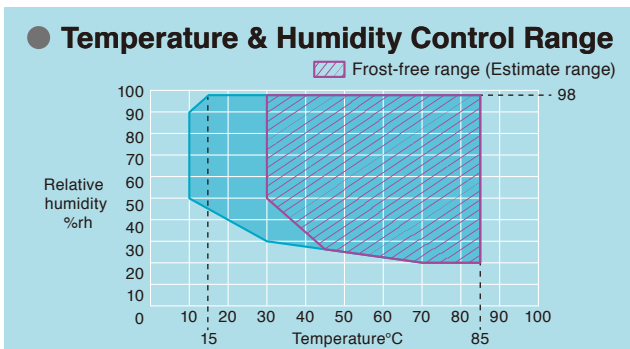

* With no specimen and under ambient temperature at +23°C.

* Restrictions on continuous humidity operation at +40°C or lower because of frost on the cooler.

Model		PHP-2J	PHP-3J	PHP-4J	
System		Balanced Temperature and Humidity Control system (BTHC system)			
Performance ^{*1}	Temp. & humidity range	Ambient temperature +10 to +100°C/40 to 98%rh Refer to diagram of temperature & humidity controllable range on this page.			
	Temp. & humidity fluctuation	±0.3°C/±2.5%rh			
	Temperature variation in space	1.5°C			
	Allowable heat load ^{*3}	300 W		600 W	
Allowable ambient conditions		0 to +40°C/up to 75%rh			
Construction	Exterior material	Stainless steel plate: 18 Cr stainless steel plate, hairline finish			
	Test area material	Stainless steel plate: 18-8 Cr-Ni stainless steel plate, 2B polish			
	Heater	Nichrome strip wire heater			
	Humidifier	18-12-2.5 Cr-Ni-Mo stainless steel sheathed heater (surface evaporating system)			
	Cooler (dehumidifier)	Plate fin cooler (heat pipe system)			
	Air circulator	Cross flow fan		Sirocco fan	
	Water supply	Supply system	Pump out system		
		Water tank	16 L		32 L
Capacity		219 L	398 L	784 L	
Chamber total load resistance		100 kg			
Dimensions ^{*4}	Inside dimensions (W x H x D mm)	500 x 730 x 600	600 x 830 x 800	1000 x 980 x 800	
	Outside dimensions (W x H x D mm)	910 x 1590 x 1073	1010 x 1690 x 1273	1410 x 1840 (1970) x 1273	
Weight		275 kg	335 kg	490 kg	


*1 The performance values are based on IEC60068-3-5:2001 and IEC60068-3-6:2001;

Performance figures are given for a +23°C ambient temperature, relative humidity of 65±20%rh, rated voltage, and no specimen inside the test area.

*2 Lowest attainable temperature in an ambient temperature of 0 to +30°C

*3 When temperature in chamber is +20°C

*4 Excluding protrusions. Dimension indicated in () includes protrusion.

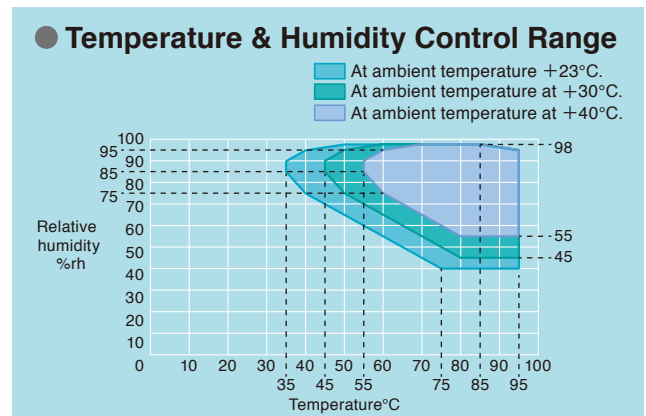

* With no specimen.

Model	PDR-3J	PDR-4J	PDL-3J	PDL-4J		
System	Balanced Temperature and Humidity Control system (BTHC system)					
Performance ^{*1}	Temp. & humidity range ^{*2}	-20 to +100°C/5 to 98%rh Refer to diagram of temperature & humidity controllable range on this page.		-40 to +100°C/5 to 98%rh Refer to diagram of temperature & humidity controllable range on this page.		
	Temp. & humidity fluctuation	±0.3°C/±2.5%rh				
	Temperature variation in space	1.5°C				
	Temperature rate of change	Heat up rate: 3.0°C/min. Pull down rate: 2.0°C/min.	Heat up rate: 3.0°C/min. Pull down rate: 1.0°C/min.	Heat up rate: 3.0°C/min. Pull down rate: 2.0°C/min.		
	Temperature extremes achievement time	Heat up time: from +20 to +100°C 30 min. Pull down time: from +20 to -20°C 40 min.		Heat up time: from +20 to +100°C 30 min. Pull down time: from +20 to -40°C 50 min.		
	Allowable heat load ^{*3}	1100 W	1250 W	1500 W	2850 W	
Allowable ambient conditions	Standard temperature and humidity region running: 0 to +40°C/up to 75% Low temperature and humidity region running: +5 to +32°C Absolute humidity no greater than 23g/kg					
Construction	Exterior material	Stainless steel plate: 18 Cr stainless steel plate, hairline finish				
	Test area material	Stainless steel plate: 18-8 Cr-Ni stainless steel plate, 2B polish				
	Heater	Nichrome strip wire heater				
	Humidifier	18-12-2.5 Cr-Ni-Mo stainless steel sheathed heater (surface evaporating system)				
	Cooler	Plate fin cooler (Doubles as dehumidifier)	Plate fin cooler (Doubles as dehumidifier), stainless steel tube cooler			
	Air circulator	Sirocco fan				
	Water supply	Supply system	Pump out system			
		Water tank	16 L	32 L	16 L	32 L
	Refrigeration unit	System	Mechanical type single-stage compression cooling			
		Compressor	Rotary compressor (R404A)		Rotary compressor (R404A) Reciprocating compressor (R404A)	Scroll compressor (R404A) Reciprocating compressor (R404A)
		Refrigerator capacity	0.65 kW	1.2 kW	1.5 kW + 0.4 kW	
		Expansion mechanism	Electronic expansion valve		Electronic expansion valve, capillary tube	
	Dehumidifier	System	Rotary recovery (adsorption) dehumidification			
		Refrigerator system	Mechanical single-stage refrigeration system			
Compressor		Rotary compressor (R404A), Reciprocating compressor (R134a)				
Expansion mechanism		Temperature regulated automatic expansion valve				
Capacity	408 L	800 L	408 L	800 L		
Chamber total load resistance	100 kg					
Dimensions ^{*4}	Inside dimensions (W x H x D mm)	600 x 850 x 800	1000 x 1000 x 800	600 x 850 x 800	1000 x 1000 x 800	
	Outside dimensions (W x H x D mm)	1885 x 1690 (1820) x 1273	2285 x 1840(1970) x 1273	1885 x 1690 (1820) x 1273	2285 x 1840 (1970) x 1273	
Weight ^{*5}	680 kg	800 kg	735 kg	930 kg		


^{*1} The performance values are based on IEC60068-3-5:2001 and IEC60068-3-6:2001; Performance figures are given for a +23°C ambient temperature, relative humidity of 65±20%rh, rated voltage, and no specimen inside the test area.

^{*2} Lowest attainable temperature in an ambient temperature of 0 to +30°C

^{*3} When temperature in chamber is +20°C

^{*4} Excluding protrusions. Dimension indicated in () includes protrusion.

^{*5} Total weight (temperature & humidity chamber and dehumidifier)

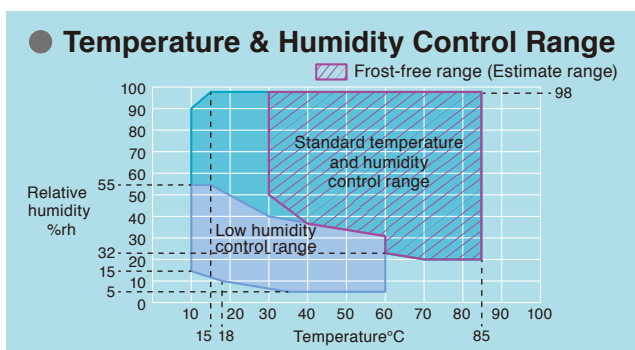

* With no specimen and under ambient temperature at +23°C.

* Restrictions on continuous humidity operation at +40°C or lower because of frost on the cooler.

Low Humidity Region Operation Precautions

- Operation in the low humidity region is not possible from a high temperature above +60°C. Perform transition from temperatures below +60°C.
- Gradient programs cannot be used in the low humidity region.
- Programs that require humidifier switching cannot be used.
- Programs that transition from outside the low humidity region to the low humidity region cannot be used. However, transitioning from the low humidity region to another region is allowed.

Model		PCR-3J	
System		Balanced Temperature and Humidity Control system (BTHC system)	
Performance ^{*1}	Temp. & humidity range ^{*2}	-20 to +100°C/30 to 90%rh Refer to diagram of temperature & humidity controllable range on this page.	
	Temp. & humidity fluctuation	±0.5°C/±2.5%rh	
	Temperature variation in space	5.0°C	
	Temperature rate of change	Heat up rate: 1.5°C/min. Pull down rate: 1.0°C/min.	
	Temperature extremes achievement time	Heat up time: from +20 to +100°C 55 min. Pull down time: from +20 to -20°C 45 min.	
	Cleanliness ^{*3}	Class5 (Particle diameter: 0.5µm)	
Allowable ambient conditions		+5 to +35°C/up to 75%rh	
Construction	Exterior material	Stainless steel plate: 18 Cr stainless steel plate, hairline finish	
	Test area material	Stainless steel plate: 18-8 Cr-Ni stainless steel plate, 2B polish	
	Heater	Nichrome strip wire heater	
	Humidifier	18-12-2.5 Cr-Ni-Mo stainless steel sheathed heater (surface evaporating system)	
	Cooler (dehumidifier)	Plate fin cooler (Doubles as dehumidifier)	
	Air circulator	Sirocco fan	
	Water supply	Supply system	Pump out system
		Water tank	16 L
	Refrigeration unit	System	Mechanical type single-stage compression cooling
		Compressor	Rotary compressor (R404A) Reciprocating compressor (R404A)
		Refrigerator capacity	1.5 kW + 0.4 kW
		Expansion mechanism	Electronic expansion valve, capillary tube
Required exhaust equipment		Exhaust flow rate: 16m ³ / min. (50Hz);18m ³ /min. (60Hz); Chamber connection port: ø123mm	
Capacity		312 L	
Chamber total load resistance		100 kg	
Dimensions ^{*4}	Inside dimensions (W x H x D mm)	600 x 650 x 800	
	Outside dimensions (W x H x D mm)	1010 x 1880 x 1273	
Weight		445 kg	


*1 The performance values are based on IEC60068-3-5:2001 and IEC60068-3-6:2001; Performance figures are given for a +23°C ambient temperature, relative humidity of 65±20%rh, rated voltage, and no specimen inside the test area.

*2 Lowest attainable temperature in an ambient temperature of 0 to +30°C

*3 When temperature is stable, the cleanliness is according to JIS B9920:2002 (equivalent to FED-STD-209D Class 100).

The Class 5 cleanliness cannot be maintained when the door is open. Do not open the door when operating at temperatures below 0°C

*4 Excluding protrusions.

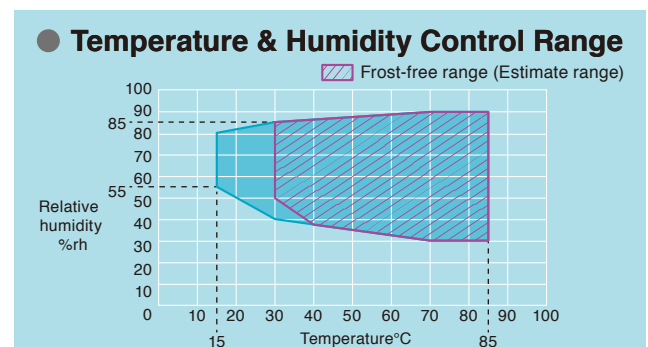

* With no specimen and under ambient temperature at +23°C.

* Restrictions on continuous humidity operation at +40°C or lower because of frost on the cooler.

Model		PU-1J	PU-2J	PU-3J	PU-4J	
System		Balanced Temperature Control system (BTC system)				
Performance ¹	Temperature range ²	-40 to +100°C				
	Temperature fluctuation	±0.3°C				
	Temperature variation in space	1.5°C				
	Temperature rate of change	Heat up rate: 3.0°C/min. Pull down rate: 2.0°C/min.				
	Temperature extremes achievement time	Heat up time: from +20 to +100°C 30 min. Pull down time: from +20 to -40°C 45 min.				
	Allowable heat load ³	850 W	1400 W	1500 W	2850 W	
Allowable ambient conditions		0 to +40°C/up to 75%rh				
Construction	Exterior material	Stainless steel plate: 18 Cr stainless steel plate, hairline finish				
	Test area material	Stainless steel plate: 18-8 Cr-Ni stainless steel plate, 2B polish				
	Heater	Nichrome strip wire heater				
	Cooler (dehumidifier)	Plate fin cooler	Plate fin cooler, stainless steel tube cooler			
	Air circulator	Cross flow fan			Sirocco fan	
	Refrigeration unit	System	Mechanical type single-stage compression cooling			
		Compressor	Rotary compressor (R404A)	Rotary compressor (R404A) Reciprocating compressor (R404A)		Scroll compressor (R404A) Reciprocating compressor (R404A)
		Refrigerator capacity	1.2 kW	1.5 kW + 0.4 kW		3.0 kW + 0.4 kW
		Expansion mechanism	Electronic expansion valve	Electronic expansion valve, capillary tube		
	Capacity		120 L	225 L	408 L	800 L
Chamber total load resistance		100 kg				
Dimensions ⁴	Inside dimensions (W x H x D mm)	500 x 600 x 400	500 x 750 x 600	600 x 850 x 800	1000 x 1000 x 800	
	Outside dimensions (W x H x D mm)	910 x 1440 x 873	910 x 1590 x 1073	1010 x 1690 x 1273	1410 x 1840 (1970) x 1273	
Weight		260 kg	330 kg	410 kg	600 kg	

¹ The performance values are based on IEC60068-3-5:2001 under the conditions of a +23°C ambient temperature, relative humidity of 65±20%rh, rated voltage, and no specimen inside the test area.

² Lowest attainable temperature in an ambient temperature of 0 to +30°C

³ When temperature in chamber is +20°C

⁴ Excluding protrusions. Dimension indicated in () includes protrusion.

Model		PG-2J	PG-4J	
System		Balanced Temperature Control system (BTC system)		
Performance ^{*1}	Temperature range ^{*2}	-70 to +100°C		
	Temperature fluctuation	±0.3°C		
	Temperature variation in space	1.5°C		
	Temperature rate of change	Heat up rate: 5.0°C/min. Pull down rate: 2.0°C/min.	Heat up rate: 5.0°C/min. Pull down rate: 1.0°C/min.	
	Temperature extremes achievement time	Heat up time: from +20 to +100°C 30 min. Pull down time: from +20 to -70°C 65 min.		
	Allowable heat load ^{*3}	700 W	2200 W	
Allowable ambient conditions		0 to +40°C/up to 75%rh		
Construction	Exterior material	Stainless steel plate: 18 Cr stainless steel plate, hairline finish		
	Test area material	Stainless steel plate: 18-8 Cr-Ni stainless steel plate, 2B polish		
	Heater	Nichrome strip wire heater		
	Cooler (dehumidifier)	Plate fin cooler, stainless steel tube cooler		
	Air circulator	Cross flow fan	Sirocco fan	
	Refrigeration unit	System	Mechanical cascade refrigerator system	
		Compressor	Rotary compressor (R404A, R508A) Reciprocating compressor (R404A)	Scroll compressor (R404A, R508A) Reciprocating compressor (R404A)
		Refrigerator capacity	1.5 kW x 1.5 kW + 0.4 kW	3.0 kW x 3.0 kW + 0.4 kW
Expansion mechanism		Electronic expansion valve, capillary tube		
Capacity		306 L	800 L	
Chamber total load resistance		100 kg		
Dimensions ^{*4}	Inside dimensions (W x H x D mm)	600 x 850 x 600	1000 x 1000 x 800	
	Outside dimensions (W x H x D mm)	1010 x 1690 x 1273	1410 x 1853 (1983) x 1593	
Weight		460 kg	695 kg	

*1 The performance values are based on IEC60068-3-5:2001 under the conditions of a +23°C ambient temperature, relative humidity of 65±20%rh, rated voltage, and no specimen inside the test area.

*2 Lowest attainable temperature in an ambient temperature of 0 to +30°C

*3 When temperature in chamber is +20°C

*4 Excluding protrusions. Dimension indicated in () includes protrusion.


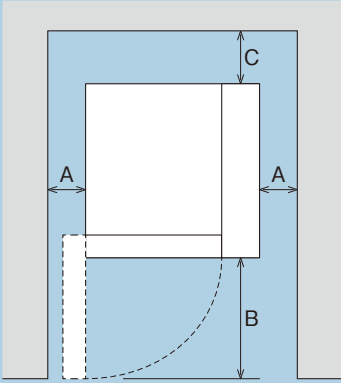
FITTINGS

- Drain hose (approx. 1 m) 1
- Condenser filter 1
- Cable port (I.D. \varnothing 50 mm on the left-side) 1
- Chamber lamp (bulb-type fluorescent light) 1
- Casters (free rolling type with leveling feet) 4
- Time signal terminal 2 contacts
- Specimen power supply control terminal 1
- Ethernet port (LAN port) 1
- USB memory port 1
- Viewing window 1
 - Type 1 to 3 W180 × H260 mm
 - Type 4 W295 × H380 mm
- Clean meter (PCR only)
- Duct meter (PCR only)

ACCESSORIES

- Glass fuse (7A)
 - Cable port rubber plug (\varnothing 50 mm) 1
 - Door key 2
 - Breaker handle stopper 1
 - Energy saving slit cover (PHP) 1
 - Fine wicks (except PU/PG) 1 box (24 wicks)
 - Cloth wicks (PDR/PDL) 1 bag (20 wicks)
 - Connection duct (PDR/PDL) 2
 - Hose band (PDR/PDL) 1
 - Operation Manual (CD) 1 set
- * Shelves, shelf brackets, and power cables are not included.

INSTALLATION REQUIREMENTS

Model	PR				PHP			PL				PSL		PDR		PDL		PCR	PU				PG	
	1	2	3	4	2	3	4	1	2	3	4	2	4	3	4	3	4	3	1	2	3	4	2	4
Maximum current (A)	200V AC 3ø 50/60 Hz																							
	8.5	20.0	22.0	34.0	17.0	17.8	26.4	22.5	23.0	36.0	32.0	48.5	34.0	44.5	35.5	47.0	23.5	14.5	15.0	28.0	24.5	45.0		
	220V AC 3ø 60 Hz *																							
	17.5	20.0	20.5	31.5	16.1	16.3	24.1	21.0	22.0	34.0	30.5	45.5	33.0	42.5	34.5	45.5	22.0	14.0	14.0	26.5	23.5	42.5		
	380V AC 3ø 50 Hz *																							
	8.5	10.0	19.5	8.6	15.4	10.0	11.0	22.0	18.0	30.0	17.5	27.0	18.5	29.0	11.0	9.0	10.5	13.5	17.5	23.0				
Humidifier water supply	400V AC 3ø 50 Hz *																							
	8.0	9.5	19.0	8.3	14.7	9.4	10.4	21.0	17.1	29.4	16.6	25.6	17.5	27.5	10.5	8.5	10.0	12.8	16.5	21.8				
Humidifier water supply	Use pure water with a conductivity of 0.1 to 10 µS/cm supplied from the tank.																	—						
Drainage	Drain ports are positioned at the bottom of the rear panel (150 mm above the floor). Prepare 1 drain hose for temperature and humidity use and 1 drain hose for continuous water supply use (option). Hose outer diameter: 18 mm, inner diameter: 12 mm Length: approximately 1 m																							
Installation space																								
	Model	PR, PL, PU				PSL, PG		PHP			PDR, PDL		PCR											
		Type 1	Type 2	Type 3	Type 4	Type 2	Type 4	Type 2	Type 3	Type 4	Type 3	Type 4	Type 3											
	Side: A	Space to manipulate the cable port and adjuster feet, to connect the power supply and the water supply and drain pipes, and to perform maintenance is required. (We recommend 30 cm or more.)																						
	Front: B (cm)	70	80	120	80	120	70	80	120	80	120	80												
Rear: C	Space to pass the water drain hose through and to perform maintenance in is required. (We recommend 60 cm or more.) This is not required if the chamber will be pulled out when maintenance is performed.																							
Top	60 cm or more																							

* Compliance with CE Marking

Options

Utility

Power cable

- 2.5 m
- 5 m
- 10 m

* If this option is not specified, the chamber does not come with a power cable.

Power plug

4P Plug

* 200V AC only.

Power socket

- 100 V 3 A
- 100 V 15 A (excluding Typ1)

Power outlets: 2

Location: Right-side



* 200V AC only.

Water-cooled refrigeration

To reduce the effect of exhaust heat, this option changes the refrigeration system to a water-cooled condenser.

Fittings: Compressor cooling fan
Water supply and drain ports
Water suspension relay

Continuous water supply

A water circuit to supply pure water continuously to the chamber.

- Water supply coupling (with ion exchanger)
- Pure water coupling with pressure-reducing valve
- Pure water coupling without pressure-reducing valve



Pure water coupling (with pressure-reducing valve)

	Water Supply Coupling (With Ion Exchanger)	Pure Water Coupling	
		With Pressure-Reducing Valve	Without Pressure-Reducing Valve
Water pressure	0.05 to 0.50 MPa (Gauge)	0.03 MPa (Gauge)	
Flow rate	1.3 L/minute or more		
Conductivity	—	0.1 to 10 μ S/cm	
Location	Lower left rear side		Upper left rear side
Connectable items	Only a steel pipe (or a PVC pipe) can be connected.		Only a hose can be connected.

* Connection of the chamber to the water supply equipment shall be performed by the user.

* The ion exchanger must be replaced periodically.

Water purifier (reverse osmosis)

Use to continuously supply pure water.

- WS-1
Power: AC100V 50/60Hz 0.4A
AC200V 50/60Hz 0.2A
AC220V 50/60Hz 0.2A
AC230V 50/60Hz 0.2A

Produced water capacity: 12 L/h

(Water temperature: 25°C)

Size: W400 × H400 × D280 mm

Produced water (pure water) supply:

One or two couplings

Location: Chamber ceiling



Additional water supply tank

The additional water supply tank complements the water volume of the standard-equipped tank, to allow continuous operations for long periods.

Effective water volume: Approximately 13L

* When the tank is attached, the chamber height increases by 215mm



Water tank

For supplying water to the chamber's fixed tank.

- Tank with screw tap (stand included)
Capacity: 10 L × 3
Stand size: W600 × H920 × D348 mm
- Tank with nozzle
Capacity: 10 L × 1



Tank with screw tap (stand included)



Tank with nozzle

*To prevent damage in the event of water leakage when installing the following optional products, a dew tray (page 34) and other preventive measures can be prepared.

- Continuous water supply
- Water purifier
- Water-cooled refrigeration

Options

Observation

Wide-view door

Almost the entire surface of the door is made of glass for test area inspection, even when testing is on process.



Effective view:

- Type 2 W470 × H720 mm
- Type 3 W570 × H820 mm
- Type 4 W970 × H970 mm

- * Standard performance may not be met under certain conditions. Inquire for details.
- * These doors cannot be locked.

Wide-view door with hand-in ports

This option features hand-in ports on a standard door, to manipulate the specimen even during testing.

Hand-in ports' inner diameter: 130mm
 Number of hand-in-ports: One or two pairs
 Accessory: Rubber gloves

- * Standard performance may not be met under certain conditions. Inquire for details.



Roller blind for wide-view window

Spring screen that can be attached to obscure the view of the inside of the chamber from the viewing window. Shade grade 1 (black)



Electrochromic viewing window

Switching opacity to transparent state by chamber lamp. The test area can be observed while the chamber lamp is on.



Lamp off



Lamp on



Door with hand-in ports

This option features hand-in ports on a standard door, to manipulate the specimen even during testing.

Number of hand-in ports:

- Type 2: One pair
- Type 3: One pair
- Type 4: One pair or two pairs

Hand-in ports' inner diameter: 130 mm

Accessory: Rubber gloves



Door without viewing window

Plain door ideal to test specimens affected by light.

- * There is no lamp installed in the test area with this option.



Options

Observation

Inner glass door

A glass door is provided between the test area and the chamber door to observe specimens. Select hand-in ports and chamber door viewing window.


Hand-in port: ID 130mm with radial rubber seal & rubber gloves

Model	Inner Door	Wipers	Hand-in Ports
Types 1 to 3	Single door	1	1 pair
Type 4	Hinged double doors	2	2 pairs
			4 pairs
		—	6 pairs


- * Inner glass door with hand-in ports cannot be installed on the PCR model.
- * Wiper's installation differs depending on the configurations.
- * Wipers are not provided to chambers controlling only temperature.
- * The lock release mechanism equipped as standard on the Type 4 is removed.
- * Standard performance may not be achieved under certain conditions. Please inquire for the details




Inner glass door with a wiper (Type 1)

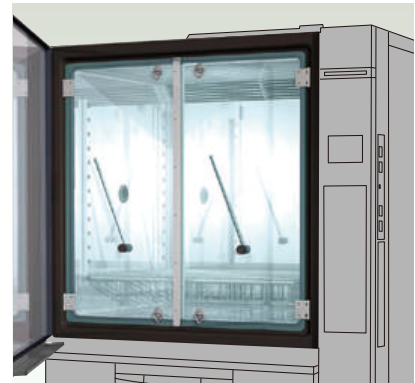

Inner glass door with wipers (Type 4)

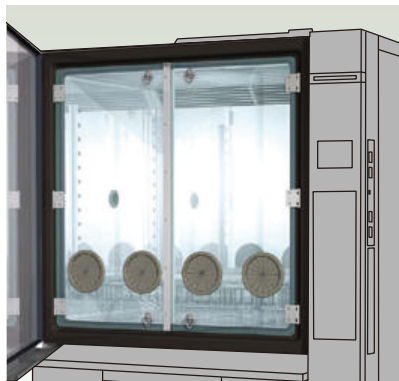

Inner glass door with two pairs of hand-in ports

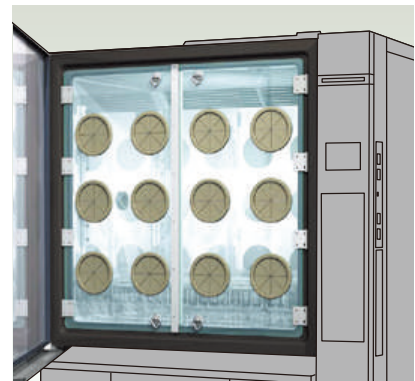

Inner glass door with six pairs of hand-in ports

Options

Specimen setting

Shelf/shelf bracket


Used to place the specimen inside the chamber.

< Shelf >

- 18-8Cr-Ni
Stainless steel



- Resin-coated
 - * Upper limit temperature: +100°C
 - * PU and PG only

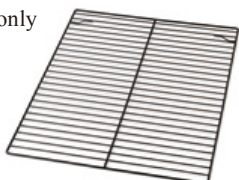

Dimensions & weight:

- For Type 1: 350 × 467 mm, 1.0kg
- For Type 2: 550 × 467 mm, 1.5kg
- For Type 3: 750 × 567 mm, 2.2kg
- For Type 4: 750 × 967 mm, 6.6kg
- For PSL/PG-2: 550 × 567 mm, 1.6kg

Load capacity for the standard shelf
Type 1 to 3: 10 kg
Type 4: 30 kg

<Shelf bracket>

- 18-8Cr-Ni Stainless steel
1 set (2 pieces)



Specimen basket

For small specimens that cannot be placed directly on the shelf.

Material: Stainless steel (4 mesh)

- Large
 - Dimensions: W700 × H35 × D450 mm
 - Load capacity: 5 kg (equally distributed load)
 - Qty. per shelf: Type 3: 1
Type 4: 2
- Small
 - Dimensions: W350 × H35 × D270 mm
 - Load capacity: 3 kg (equally distributed load)
 - Qty. per shelf: Type 1: 1
Type 2: 2
Type 3: 4
Type 4: 6

- * Place the specimen baskets on the shelf.
- * Do not use when exceeding the shelf load capacity.
- * Tests may not satisfy standard performance if the air flow is blocked, so ensure sufficient space around the specimen baskets.



Floor reinforcement

Enhances the floor load capacity inside the chamber.

- Up to 100 kg
- Up to 200 kg
- Up to 300 kg
- * Standard specification: up to 70 kg

Precision inner chamber

An aluminum box inside the chamber allows to reduce the air velocity and maintain the required temperature and humidity distribution.

Velocity: 0.5 m/sec. or lower

Temperature & humidity fluctuation:
±0.5°C/±2.5%rh


Temperature & humidity distribution:
±0.75°C/±5.0%rh

Effective cross section & load capacity :

- Type 1 W335 × H285 mm, up to 20kg
- Type 2 W335 × H435 mm, up to 20kg
- Type 3 W435 × H585 mm, up to 30kg
- Type 4 W835 × H685 mm, up to 30kg

Accessories: Shelves and shelf brackets
(2 sets)

- * Standard performance may not be achieved under certain conditions. Please inquire for the details.

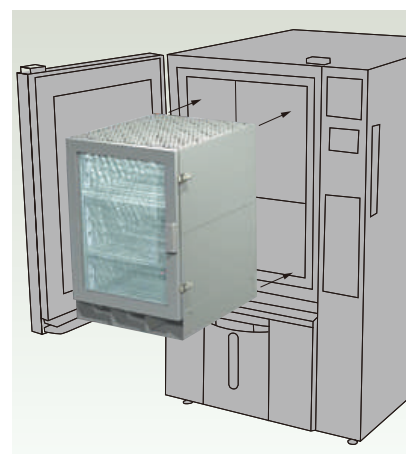

Heavy-duty shelf

Used to hold heavy specimens.

- * To install heavy-duty shelves from 50 kg, reinforcement of the chamber structure is necessary.

Load capacity (per shelf):

- 30kg (Except PDL/ PDR/ PCR)
- 50kg (Except PDL/ PDR/ PCR)
- 80kg (Only for type 4, 150°C spec., except PHP/PDR/PDL)
- 100kg (A set of 5 shelves, only for type 4, except PDR/ PDL)

Load Capacity per Shelf	Capacity of Shelf Support Pole	Floor Load Capacity	Chamber's Total Load Capacity	Shelf Weight (Per Shelf)	Max. Qty. in Chamber
30 kg	90 kg	70 kg	100 kg	Type 1: 1.8 kg Type 2: 2.9 kg Type 3: 4.3 kg PSL/PG2: 3.4 kg	3
50 kg	100 kg	70 kg	100 kg	Type 1: 2.3 kg Type 2: 3.4 kg Type 3: 5.1 kg Type 4: 12.1 kg PSL/PG2: 4.0 kg	2
80 kg	100 kg	70 kg	100 kg	9.3 kg	2
100 kg	A special rack is installed in the test area to accommodate 5 shelves. (Rack weight: 56kg)		500 kg	13 kg	5

* Weight of shelf (ves) + Specimen on shelf (ves) efloor + special rack.

Options

Specimen setting

Additional cable port

Provided in addition/ replacement of the standard cable port (left side). Comes with a cap and a rubber plug.

- ø25 mm
- ø50 mm
- ø70 mm
- ø100 mm
- ø150 mm
- Flat cable port

* When installed on the right side, an external drip pan is also included.



Left-side (chamber interior)



Right-side



Model		PR				PHP			PL				PSL		PDR		PDL		PCR	PU				PG		
		1	2	3	4	2	3	4	1	2	3	4	2	4	3	4	3	4	3	1	2	3	4	2	4	
Right	ø50mm	—	●	●	●	●	●	●	—	●	●	●	●	●	●	●	●	●	—	—	●	●	●	●	●	●
	ø50mm around wiring board inside the wall	—	●	●	●	●	●	●	—	●	●	●	●	●	●	●	●	●	—	—	●	●	●	●	●	●
	ø100mm	—	●	●	●	●	●	●	—	●	●	●	●	●	●	●	●	●	—	—	●	●	●	●	●	●
	ø100mm around wiring board inside the wall	—	—	●	●	—	●	●	—	—	●	●	—	●	●	●	●	●	—	—	—	●	●	—	●	●
Left	ø25mm	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
	ø50mm	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
	ø70mm	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
	ø100mm	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
	ø150mm	—	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	—	●	●	●	●	●	●
	Flat cable port	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Ceiling	ø25mm	○	○	○	○	—	—	—	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
	ø50mm	○	○	○	○	—	—	—	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
	ø70mm	●	●	●	●	—	—	—	●	●	●	●	●	●	●	●	●	●	—	●	●	●	●	●	●	●
	ø100mm	○	○	○	○	—	—	—	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
	ø150mm	—	—	●	●	—	—	—	—	—	●	●	●	●	●	●	●	●	●	—	—	●	●	●	●	●
	Flat cable port	●	●	●	●	—	—	—	●	●	●	●	●	●	●	●	●	●	●	—	—	●	●	●	●	●

● Retrofit is not available. ○ Retrofit is available.

Cable port rubber plug

Comes with the cable port.

- ø25 mm
- ø50 mm
- ø100 mm
- Spiral-wrapped plug (5 × 50 × 2000 mm)
- For the flat cable port



ø50 mm



Spiral-wrapped type
* Cut the silicone sponge so that the roll fits in the port.



For flat cable port

Cable port dew tray (for left side)

Catches dew that comes out of the cable port.

Location: Left-side

Model	Size (W×Dmm)
Type 1	300×50
Type 2	510×50
Type 3·4	700×50
PDR/PDL	600×50



Options

Specimen setting

EZ connect cable port plug for power supply

Wires that go through this cable port plug have a terminal at both ends.

This option ease the power cable connection between specimen and external device.

Spec.: AC 6 to 24V 0.1 to 3A

DC 1.5 to 60V 0.1 to 3A


Interior terminals: Terminals on insulated jig plate, 10P

Exterior terminals: Block terminals with magnet, 10P

Temperature/ humidity range:

-70 to +180°C / 20 to 98%rh

* Based on cable port $\phi 25\text{mm}$ and $\phi 50\text{mm}$.

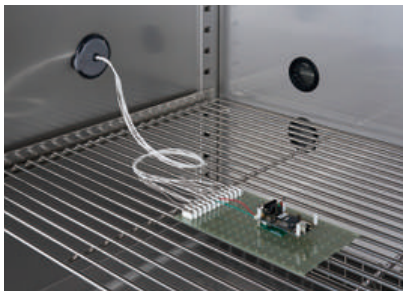

Interior terminal



Exterior terminal



EZ connect cable port plug for measurement

This port plug equips with a terminal box on interior wall, which facilitates the wiring work inside the test area.


Spec.: DC no more than 500V, 5A

Terminals: 20ch

More than $1 \times 10^{12}\Omega$ as insulation resistance

Temperature/ humidity range:

-70 to +150°C / 20 to 98%rh

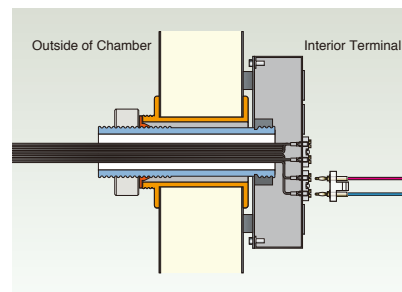


Performance

Specimen temperature control

Sensors are attached to the specimen to allow exposure tests that provide accurate temperature stress to the specimen.

- Insulated type
- Non-insulated type

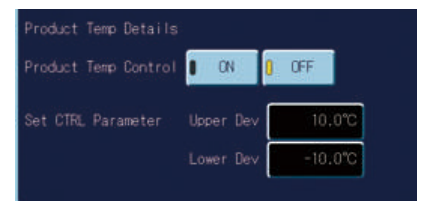

Capacitive humidity sensor

Attached in place of the wet bulb wick.

Measurement range: 0 to 100%rh

Accuracy: $\pm 2\%$ rh

(-20 to +40°C and 0 to 90%rh)



Time up output

This option enables turning the power to the specimen ON or OFF with contact signal output when the time is up by using the timer function on the temperature (humidity) controller.




Options

Performance

Time signal terminal

Adds additional terminals to the standard time signal terminals.

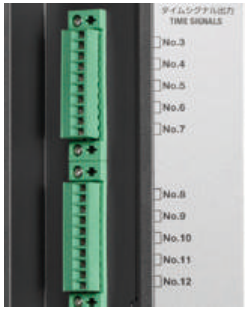

Temp. & humid. SP attainment output

When the temperature (humidity) in the chamber reaches the set values, the chamber sends out a contact signal. It synchronizes the power supply to the specimen, the timing for measurements or to prevent dew from condensing on the specimens.

Applying DC power supply

Capable of applying voltage to the specimen, used for bias testing. The DC power supply unit synchronizes with constant and program operations, and can be set for each temperature and humidity program step.

Rated voltage	5V	12V	15V	24V	48V
Rated current	60A	27A	22A	14A	7A
Voltage setting range	1.0 to 5.5V	2.4 to 13.2V	3.0 to 16.5V	4.8 to 26.4V	9.6 to 52.8V



Frost relief valve

To reduce frosting on the evaporator during continuous operation at room temperature (25°C) or at a low temperature.

DC inverter refrigeration

Able to reduce power consumption when operating at low temperatures of 0°C or below as well as shorten temperature pull-down time.

- 100°C Specification
- 150°C Specification
- * 200V AC only


Upper limit modification

Enables tests over 100°C.

- Upper limit temperature +150°C
- Upper limit temperature +180°C (except PSL-4, PG-4)
- * Wide-view window up to 150°C is available as a custom option. (PR/PL/PU-2/3/4)
- * Standard performance may not be met under certain conditions. Inquire for details.


Lower temperature & humidity range

Testing can be performed at low temperature and humidity (+5°C / 5%rh) where static electricity tends to be generated.

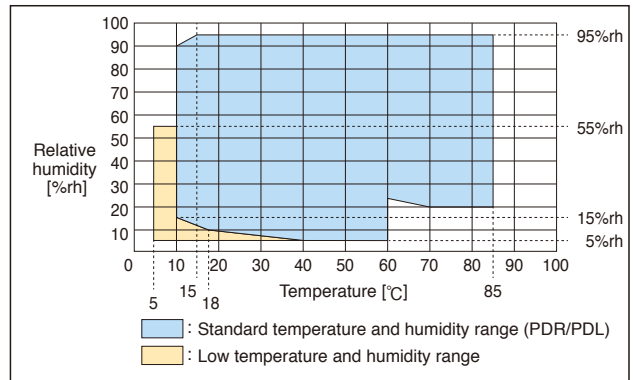


Frost-free circuit

Prevents frost from accumulating on the refrigeration circuit to allow long-term continuous operation. Operating ambient temp. range: Approx. +10°C to +40°C
* Except the PR-1/PL-1/PU-1/PHP

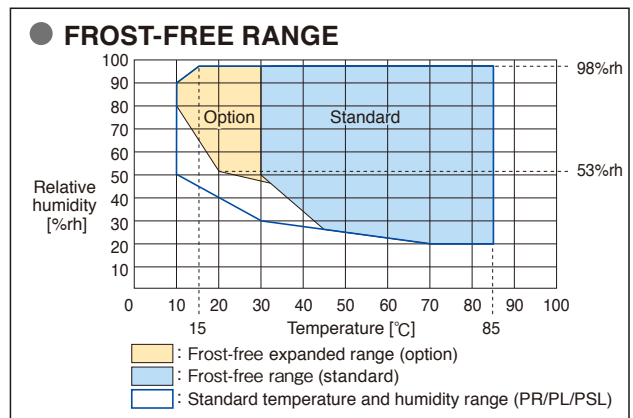


Defrost circuit

Defrosts the refrigeration circuit.

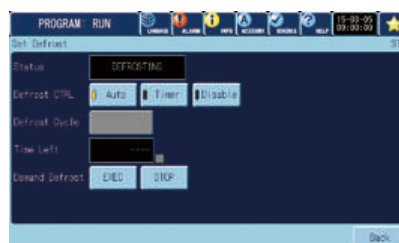

Airflow adjuster

Used when tests require low airflow velocity or a certain velocity of airflow. Setting value range: 4 levels



Options

Measurement

I/O Interface

Communication ports to connect the chamber to a PC and a device and using communication commands.

- RS-485* (D-sub 9-pin × 2)
- RS-232C (D-sub 9-pin × 1)
- GPIB* (IEEE488)

* Up to 16 chambers can be connected to a single PC.

Communication cables

- RS-485 5 m / 10 m / 30 m
- GPIB 2 m / 4 m

Temperature (humidity) recorder wiring

Preparation of a power cable, temperature sensor, relative humidity signal and a grounding wire for additional installation in the future.

Paperless recorder

Records the temperature and humidity of each section such as the temperature inside the chamber.

Data saving cycle: 5 sec.

Internal recording media: Flash memory 8MB

External recording media:

- CF memory card
(includes a 256 MB CF card)
- USB flash drive

No. of inputs:

< Temperature & humidity type >

Temperature 1, Humidity 1

(4 more channels can be turned ON)

< Temperature type >

Temperature 1

(5 more channels can be turned ON)



Temperature (humidity) recorder

Records the temperature and humidity of each section such as the temperature inside the chamber.

Recording method: Dot

Recording paper: Effective width 100 mm

No. of inputs:

< Temperature & humidity type >

Temperature 5, Humidity 1

– 50 to +100°C/0 to 100%rh

– 50 to +150°C/0 to 100%rh

– 100 to +100°C/0 to 100%rh

– 100 to +150°C/0 to 100%rh

– 100 to +200°C/0 to 100%rh

< Temperature type >

Temperature 6

– 50 to +100°C

– 100 to +100°C

– 100 to +200°C



Recorder output terminal

- Temperature, humidity, and heater output

This terminal outputs the temperature and relative humidity in the test area.



- Dry/wet bulb temperature

Terminal board for dry-bulb/wet-bulb

sensors in the chamber.



Thermocouple

Attached to specimen to measure specimen temperature.

Thermocouple with a brass ball tip

Thermocouple type T (Copper/Copper-Nickel)


- 2 m
- 4 m
- 6 m



Wet bulb wick

This option contains replacement wicks.

- Fine wicks (non-woven fabric)
FW-5 (for the PR, PL, PSL, and PHP):
24 wicks
FW-6 (for the PDR, PDL, and PCR): 24 wicks
Included: 1 dropper

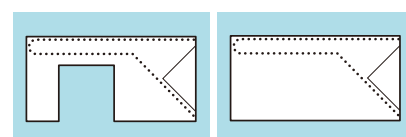

FW-5

FW-6

- Cloth wicks (gauze)
For the PDR and PDL: 20 wicks



Power meter

This option displays the integral power consumption of the chamber.

Display range: 0 to 9999.99 kWh

External memory: SD memory card

Location: Instrumentation panel

* The SD memory card is not included.



Folding table

A folding table is equipped on the right side of the chamber.

The table can be used when a measuring instrument, PC, or other device is connected.



Table dimensions: W410 × D300 mm

Load capacity: 20 kg

Options

Safety

Overcool protector

If the temperature inside the chamber decreases excessively, the chamber stops operating to prevent the specimens from being damaged.

Additional overheat protector

Additional preventive measures can be taken for excessive temperature rise in the chamber, in addition to the standard equipped overheat protector.



Alarm output terminal

If the safety device of the chamber is activated, external alarm terminal will notify it to a remote point.

Operation:

When connecting with N.O. contact (normally open contact), output “close” contact.

When connecting with N.C. contact (normally close contact), output “open” contact.

Current-carrying capacity: 250 V AC, 3 A
Accessory: Plug

Location: Right side or within the control board (retrofit is not available)

* Please connect the alarm circuit by customer.

* This option can also be installed inside the electrical compartment.
Please inquire for the details.

External device alarm input terminal

Equips the chamber with a terminal that is used to stop the operation of the chamber in the event that an external device to which the chamber is linked malfunctions.

Door opening signal output terminal

Equips the chamber with a terminal that outputs the door open status. Capable of controlling an external device that operates along with door operation and records the temperature disturbance history.

Status indicator light

Select light color, lighting, and blinking or buzzer sound.

- 1 level, light: 1 color, height: 533 mm
- 2 levels, light: 2 colors, height: 575 mm
- 3 levels, light: 3 colors, height: 616 mm
- 4 levels, light: 4 colors, height: 657 mm

Pole length: 287 mm

* The pole can be shortened in units of 10 mm to a minimum height of 47 mm.



Rotating signal light

The rotating signal lights up when an error occurs.

Color of the signal:

- Red
- Yellow



Trouble buzzer

Buzzer notification when an error occurs.

Emergency stop pushbutton

Stops the chamber immediately.



With guard



With cover

Power key switch

Used to manage/restrict the chamber usage.



Power indicator

The operator can verify if the breaker is ON or OFF from the chamber front.



Main power switch

The main power switch allows turning the power ON and OFF from the chamber front.



* 380 V AC and 400 V AC only.

Options


Safety

Pressure relief vent

To reduce an explosive force by releasing pressure when the chamber pressure suddenly goes up.

Pressure relief vent: W300 × D300 mm
Outside dimension: 200 mm higher than the standard height.

* The pressure relief port is not intended to guarantee safety against explosion.

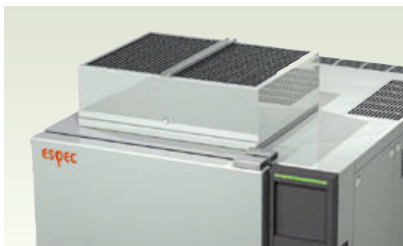

Safety door lock

- Dial combination safety door lock
The dial mechanism gives more secure door locking.



Dial combination

- Lever handle safety door lock
The rotation mechanism with levers gives more secure door locking.
* In case of Type 4, unlocking device is not equipped.



Lever handle

Anchoring fixtures

Used to fix the chamber to the floor.

* Anchoring fixtures when installing the dew tray are also available.



Chamber dew tray

A chamber dew tray is installed below the chamber in the unlikely case there would be water leakage.



Model	W×H×Dmm
For Type 1	1010×30×1030
For Type 2	1010×30×1230
For Type 3 (Type 2 PSL/PG)	1110×30×1430
For Type 4	1510×30×1750
For the PDL/PDR dehumidifier unit	875×30×1430

* Separate installation work is required.

Dew drip prevention

To prevent dew that has formed on the chamber ceiling from dripping onto specimens.

* The height is 20 mm smaller than the standard inside dimensions.

* With this option, the temperature rate of change and temperature extremes achievement time change.

For details, please refer to specifications.



Operation panel cover

A cover for the operation panel. (Plastic)



Evaporator frost check window

This window is installed in the test area and is used to check whether frost has accumulated on the cooler.

Diameter: 55 mm



Options

Test area low-silicone

Reduces the production of silicone gas (siloxane) in the test area.

Brake oil protection

Changes resin parts (water tank front cover, door dew tray, chamber dew tray) to stainless steel.

Finned sheathed heater

Changes the heater to a sheathed heater with fins to lower the surface temperature of the heater, decrease corrosion, and reduce defective insulation.

Stainless steel evaporator

Changes the plate fin cooler (also used as a dehumidifier) to stainless steel, which improves the corrosion resistance.

* Standard performance may not be met under certain conditions. Inquire for details.

Air circulator removed for move-in

To prevent damage caused by height restrictions, the air circulator for type 4 chambers is not mounted on the chamber during shipment.

* The air circulator must be installed separately.

Documents

Operation manual


- CD
- Booklet

Reports & certificates

- Testing and inspection report
- Test data
- Temperature (& humidity) uniformity measurement
- Calibration report
- Calibration certificate
- Traceability certificate
- Traceability system chart



Testing and inspection report

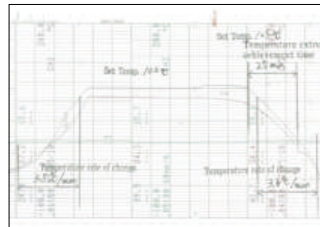


Standard test data


Temperature and humidity uniformity measurement data



Calibration report

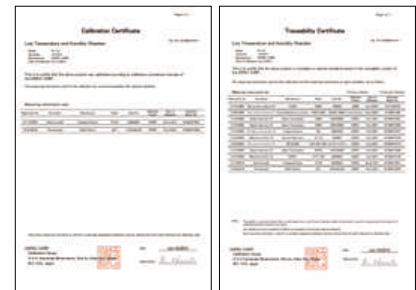

Calibration certificate Traceability certificate

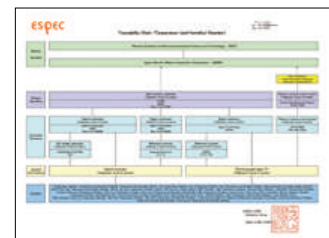

Traceability system chart

Safety precautions

- Do not use specimens which are explosive or inflammable, or which contain such substances. To do so could be hazardous, as this may lead to fire or explosion.
- Do not place corrosive substances in the chamber. If corrosive substances are generated by the specimen, the life of the chamber may be significantly shortened specifically because of the corrosion of stainless steel and copper and because of the deterioration of resin and silicon. An optional corrosion-resistant cooler, which is designed to improve the corrosion resistance of the chamber, is available.
- Do not place life forms or substances that exceed allowable heat generation.
- Be sure to read the operation manual before operation.

Platinous J Series Options

You can select the check boxes of the model and options you want, and submit this information for a request for quotation.

● Retrofit is not available. ○ Retrofit is available.

Type: _____

Page	OPTION	<input checked="" type="checkbox"/>	PR	PHP	PL	PSL	PDR/PDL	PCR	PU	PG
P.25	Power cable	<input type="checkbox"/>	●	●	●	●	●	●	●	●
	Power plug *1	<input type="checkbox"/>	●	●	●	●	●	●	●	●
	Power socket *1	<input type="checkbox"/>	●	●	●	●	●	●	●	●
	Continuous water supply	<input type="checkbox"/>	○	○	○	○	○	○	—	—
	Water purifier	<input type="checkbox"/>	○	○	○	○	○	○	—	—
	Water-cooled refrigeration	<input type="checkbox"/>	●*2	—	●*2	●	—	●	●*2	●
	Additional water supply tank	<input type="checkbox"/>	○	○	○	○	○	○	—	—
	Water tank	<input type="checkbox"/>	○	○	○	○	○	○	—	—
P.26	Wide-view door *3	<input type="checkbox"/>	○	—	○	—	—	—	○	—
	Wide-view door with Hand-in ports *2	<input type="checkbox"/>	●	—	●	—	—	—	●	—
	Roller blind for wide-view window *3	<input type="checkbox"/>	●	—	●	—	—	—	●	—
	Electrochromic viewing window	<input type="checkbox"/>	●	●	●	●	●	●	●	●
	Door with hand-in ports *3	<input type="checkbox"/>	●	●	●	●	●	—	●	●
	Door without viewing window	<input type="checkbox"/>	●	●	●	●	●	●	●	●
P.27	Inner glass door	<input type="checkbox"/>	●	●	●	●	●	—	●	●
	Shelf/shelf bracket (Stainless steel)	<input type="checkbox"/>	○	○	○	○	○	○	○	○
	Shelf (Resin-coated)	<input type="checkbox"/>	—	—	—	—	—	—	○	○
	Heavy-duty shelf (30 kg) *6	<input type="checkbox"/>	○	○	○	○	—	—	○	○
	Heavy-duty shelf (50 kg) *4	<input type="checkbox"/>	○	○	○	○	—	—	○	○
	Heavy-duty shelf (80 kg) *5	<input type="checkbox"/>	●	—	●	●	—	—	●	●
	Heavy-duty shelf (100 kg) *5	<input type="checkbox"/>	●	●	●	●	—	—	●	●
	Specimen basket	<input type="checkbox"/>	○	○	○	○	○	○	○	○
	Floor reinforcement (100 kg)	<input type="checkbox"/>	○	○	○	○	—	—	○	○
	Floor reinforcement (200 kg/300 kg)	<input type="checkbox"/>	●	●	●	●	—	—	●	●
Precision inner chamber	<input type="checkbox"/>	○	○	○	○	—	—	○	○	
P.29	Additional cable port	<input type="checkbox"/>	Inquire for details.							
	Cable port rubber plug	<input type="checkbox"/>	○	○	○	○	○	○	○	○
	Cable port dew tray (for left side)	<input type="checkbox"/>	●	●	●	●	●	●	●	●
P.30	EZ connect cable port plug for power supply	<input type="checkbox"/>	○	○	○	○	○	○	○	○
	EZ connect cable port plug for measurement	<input type="checkbox"/>	○	○	○	○	○	○	○	○
	Specimen temperature control	<input type="checkbox"/>	○	○	○	○	○	○	○	○
	Capacitive humidity sensor	<input type="checkbox"/>	●	●	●	●	●	●	—	—
	Time up output	<input type="checkbox"/>	●	●	●	●	●	●	●	●
P.31	Time signal terminal	<input type="checkbox"/>	●	●	●	●	●	●	●	●
	Temp. & humid. SP attainment output	<input type="checkbox"/>	●	●	●	●	●	●	●	●
	Applying DC power supply	<input type="checkbox"/>	○	○	○	○	○	○	○	○
	Frost relief valve	<input type="checkbox"/>	●	—	●	●	●	●	●	●
	DC inverter refrigeration *1,3	<input type="checkbox"/>	—	—	●	—	—	—	●	—
	Upper limit modification (+150°C)	<input type="checkbox"/>	●	—	●	●	—	—	●	●
	Upper limit modification (+180°C)	<input type="checkbox"/>	●	—	●	●*6	—	—	●	●*6
	Lower temperature & humidity range	<input type="checkbox"/>	—	—	—	—	●	—	—	—

*1 Applicable only to 200V AC.

*2 Type 3 and 4 only.

*3 Excluding Type 1.

*4 If the chamber has been reinforced, equipment can be added.

*5 Type 4 only.

*6 Excluding Type 4.

Platinous J Series Options

You can select the check boxes of the model and options you want, and submit this information for a request for quotation.

● Retrofit is not available. ○ Retrofit is available.

Type: _____

Page	OPTION	<input checked="" type="checkbox"/>	PR	PHP	PL	PSL	PDR/PDL	PCR	PU	PG
P.31	Frost-free circuit	<input type="checkbox"/>	●*1	—	●*1	●	●	●	●*1	●
	Defrost circuit	<input type="checkbox"/>	●*1	—	●*1	●	●	●	●*1	●
	Airflow adjuster	<input type="checkbox"/>	○	—	○	○	—	—	○	○
P.32	Interface	<input type="checkbox"/>	○	○	○	○	○	○	○	○
	Communication cables	<input type="checkbox"/>	○	○	○	○	○	○	○	○
	Temperature (humidity) recorder wiring	<input type="checkbox"/>	○	○	○	○	○	○	○	○
	Paperless recorder	<input type="checkbox"/>	○	○	○	○	○	○	○	○
	Temperature (humidity) recorder	<input type="checkbox"/>	○	○	○	○	○	○	○	○
	Recorder output terminal (temperature, humidity, and heater output)	<input type="checkbox"/>	○	○	○	○	○	○	—	—
	Recorder output terminal (dry [wet] bulb temperature)	<input type="checkbox"/>	○	○	○	○	○	○	○	○
	Thermocouple	<input type="checkbox"/>	○	○	○	○	○	○	○	○
	Wet bulb wick	<input type="checkbox"/>	○	○	○	○	○	○	—	—
	Power meter	<input type="checkbox"/>	○	○	○	○	○	○	○	○
	Folding table *3	<input type="checkbox"/>	●	●	●	●	●	—	●	●
P.33	Overcool protector	<input type="checkbox"/>	○	○	○	○	○	○	○	○
	Additional overheat protector	<input type="checkbox"/>	○	○	○	○	○	○	○	○
	Alarm output terminal	<input type="checkbox"/>	○	○	○	○	○	○	○	○
	External device alarm input terminal	<input type="checkbox"/>	●	●	●	●	●	●	●	●
	Door opening signal output terminal	<input type="checkbox"/>	○	○	○	○	○	○	○	○
	Status indicator light	<input type="checkbox"/>	○	○	○	○	○	○	○	○
	Rotating signal light	<input type="checkbox"/>	○	○	○	○	○	○	○	○
	Trouble buzzer	<input type="checkbox"/>	○	○	○	○	○	○	○	○
	Emergency stop pushbutton	<input type="checkbox"/>	○	○	○	○	○	○	○	○
	Power key switch	<input type="checkbox"/>	○	○	○	○	○	○	○	○
	Power indicator	<input type="checkbox"/>	○	○	○	○	○	○	○	○
Main power switch *4	<input type="checkbox"/>	○	○	○	○	○	○	○	○	
P.34	Pressure relief vent *1	<input type="checkbox"/>	●	—	●	●	●	—	●	●
	Safety door lock	<input type="checkbox"/>	●	●	●	●	●	●	●	●
	Anchoring fixtures	<input type="checkbox"/>	●	●	●	●	●	●	●	●
	Chamber dew tray	<input type="checkbox"/>	●	●	●	●	●	●	●	●
	Dew drip prevention	<input type="checkbox"/>	●	Standard equipment	●	●	●	—	●	●
	Operation panel cover	<input type="checkbox"/>	●	●	●	●	●	●	●	●
	Evaporator frost check window	<input type="checkbox"/>	●	—	●	●	—	—	●	●
P.35	Test area low-silicone	<input type="checkbox"/>	●	●	●	●	—	—	●	●
	Brake oil protection *3	<input type="checkbox"/>	●	—	●	—	—	—	●	—
	Finned sheathed heater *1	<input type="checkbox"/>	●	—	●	●	—	—	●	●
	Stainless steel evaporator	<input type="checkbox"/>	●	—	●	—	—	—	●	—
	Air circulator removed for move-in *5	<input type="checkbox"/>	●	●	●	●	●	—	●	●
	Operation manual	<input type="checkbox"/>	○	○	○	○	○	○	○	○
	Reports & certificates	<input type="checkbox"/>	●	●	●	●	●	●	●	●

*1 Excluding Type 1.

*2 Applicable only to 200V AC.

*3 Type 3 and 4 only.

*4 Applicable only to 380 V/400 V AC.

*5 Type 4 only.


Network System

OnlineCORE (Sold separately)
Model : PCS-ES



The centralized control system, which is recommended for multiple test chambers users.

You can easily observe the operational status of environmental test chambers by connecting to an existing intranet. With this function, you can also connect to various surrounding devices like network cameras and test devices, and also to test chambers of other manufacturers.

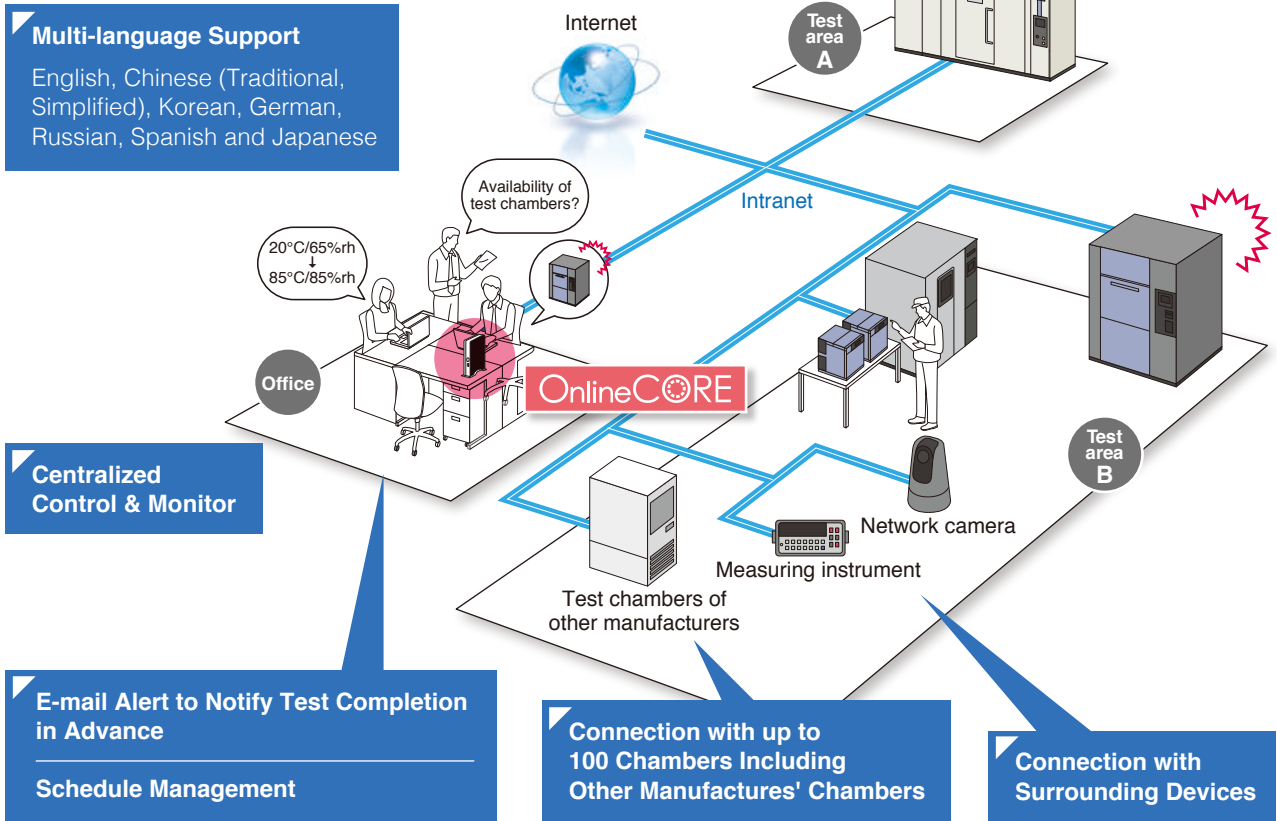

Test Navi

Provide reliability testing information dedicated to engineers.


<http://www.test-navi.com/eng/index.html>



This website provides practical knowledge on environmental testing that ESPEC has acquired through years of experience, as well as covering everything from the fundamentals to the latest information on environmental and reliability testing.



- Updates for product software
- Search for environmental test standards



- Download test profiles from a list of environmental test standards

ESPEC CORP. <http://www.espec.co.jp/english>

Head Office

3-5-6, Tenjinbashi, Kita-ku, Osaka 530-8550, Japan
Tel: 81-6-6358-4741 Fax: 81-6-6358-5500

ESPEC NORTH AMERICA, INC.

Tel: 1-616-896-6100 Fax: 1-616-896-6150

ESPEC EUROPE GmbH

Tel: 49-89-1893-9630 Fax: 49-89-1893-96379

ESPEC ENVIRONMENTAL EQUIPMENT (SHANGHAI) CO., LTD.

Head Office

Tel: 86-21-51036677 Fax: 86-21-63372237

BEIJING Branch

Tel: 86-10-64627025 Fax: 86-10-64627036

TIANJIN Branch

Tel: 86-22-26210366 Fax: 86-22-26282186

GUANGZHOU Branch

Tel: 86-20-83317826 Fax: 86-20-83317825

SHENZHEN Branch

Tel: 86-755-83674422 Fax: 86-755-83674228

SUZHOU Branch

Tel: 86-512-68028890 Fax: 86-512-68028860

ESPEC TEST TECHNOLOGY (SHANGHAI) CO., LTD.

Tel: 86-21-68798008 Fax: 86-21-68798088

ESPEC SOUTH EAST ASIA SDN.BHD.

Tel: 60-3-8945-1377 Fax: 60-3-8945-1287

ESPEC ENGINEERING (THAILAND) CO., LTD.

Tel: 66-3-810-9353 Fax: 66-3-810-9356



ISO 9001/JIS Q 9001

Quality Management System Assessed and Registered

ESPEC CORP. has been assessed by and registered in the Quality Management System based on the International Standard ISO 9001:2008 (JIS Q 9001:2008) through the Japanese Standards Association (JSA).

* Registration : ESPEC CORP.
(Overseas subsidiaries not included)

ISO 14001 (JIS Q 14001)

Environmental Management System Assessed and Registered

ESPEC CORP.
(Overseas subsidiaries not included)